


Pong
Arcade Kit

Part No.	Description	QTY	M	PICTURE
P152-138-000	The Whole Ball Assy	1	PCS	
P152-141-000	The Whole Pedal Assy	2	PCS	
P152-620-000	Magicnet 1(Below the Ball assy)	4	PCS	
P152-619-000	Magicnet 2(Below the paddle assy)	2	PCS	
P152-418-000	Bluetooth amplifier board	1	PCS	
P152-402-000	Coder	1	PCS	
P152-403-000	White button 1P	1	PCS	
P152-404-000	White button 2P	1	PCS	
P152-405-000	Orange button	1	PCS	
P152-440-000	Small Button (Easy/Normal/Difficult)	3	PCS	
P152-432-000	Display board	1	PCS	
P152-446-000	Main board	1	PCS	
P152-415-000	Sensor SW	2	PCS	
P152-419-000	Audio isolator	1	PCS	
P140-902-000	Jog Assembly	1	PCS	

P152-406-000	Power supply	1	PCS	
P152-437-000	Power supply (PS-6301)	1	PCS	
P152-714-000	Playfield glass	1	PCS	
P152-615-000	Belt	1	M	
P152-612-000	Motor driver(2405)	1	PCS	
P152-611-000	Motor driver(2305)	1	PCS	
P152-613-000	Hybrid stepping motor(HS 42)	1	PCS	
P152-614-000	Hybrid stepping motor(HS 57)	1	PCS	
P152-438-000	PCB(Control the light belt)	1	PCS	
P152-416-00	Fuse Board 1	1	PCS	
P152-426-000	Fuse Board 2	1	PCS	